


For use on Model 86-UD only.

752-227 HBP 2/11

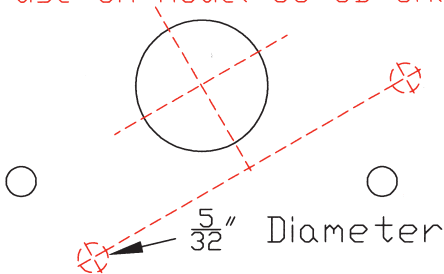

Solid lines are for existing holes only.
Dashed lines are for drilling new mounting holes.
Remove backing and position over existing holes
on the outside of cabinet before drilling.